SIEMENS
mobile

Gigaset S44

Gigaset

Issued by
Information and Communication mobile
Haidenauplatz 1
D-81667 Munich

© Siemens AG 2004
All rights reserved. Subject to availability.
Rights of modification reserved.

Siemens Aktiengesellschaft
www.siemens-mobile.com/gigaset

Handset at a glance

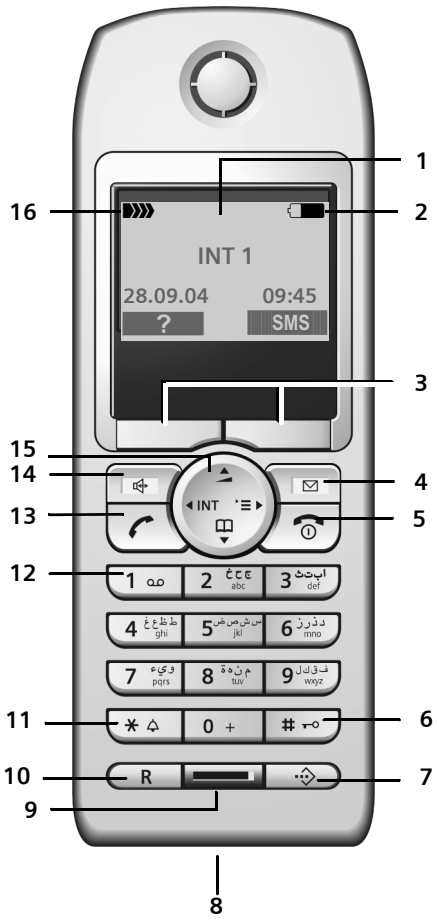

1 **Display** (screen) in idle status (display depending on the base station)
2 **Battery charge condition**
(flat to full)
flashes: battery almost flat
flashes: battery charging
3 **Display keys** (page 7)
4 **Message key**
Access to calls and message lists (depending on the base station);
Flashes: new message or new call.
5 **End call key, On/Off key**
End call, cancel function, go back one menu level (press briefly), back to idle status (press and hold), activate/deactivate handset (press and hold in idle status)
6 **Hash key**
Keypad lock on/off (press and hold)
7 **Call-by-Call list key**
Open Call-by-Call list
8 **Connection socket** for headset and PC interface
9 **Microphone**
10 **R key**
Initiating a consultation call (press briefly, only on ISDN base stations),
Insert a dial pause (press and hold)
11 **Star key**
Ringtones on/off (press and hold), toggles between upper/lower case and digits
12 **Key 1**
Select answering machine/T-Net box (answering machine in network) (press and hold)
13 **Talk key**
Answer a call, open last number redial list (press briefly), start dialling (press and hold)
14 **Handsfree key**
Switch between earpiece and handsfree mode;
Lights up: handsfree activated;
Flashes: incoming call, automatic last number redial
15 **Control key** (page 7)
16 **Signal strength**
(high to low)
flashes: no reception

Note:
Illustration shows a handset on a base station with SMS functionality.

Contents

Handset at a glance 1

Safety precautions 3

Gigaset S44 – a handset with many extras 4

Setting up the phone for use 4
Inserting the batteries 4
Registering your phone 5
Charging batteries 5
Changing the base station 6
Changing the name of the base station 6
Activating/deactivating the handset . . 6
Activating/deactivating the keypad lock 6
Setting the date and time 7

Using the phone 7
Control key 7
Display keys 7
Return to idle status 8
Menu management 8
Correcting wrong inputs 8

Notes on the user guide 8
Symbols 8
Example: menu input 9
Example: multiple line input 9

Making calls 10
Making an external call 10
End call 10
Answering a call 10
Handsfree talking 10
Muting 11
Making internal calls 11

Using the directory and lists . . . 11
Directory and call-by-call list 11
Email directory 14
Last number redial list 15
Viewing calls and messages list 15
Activating the room monitor and entering the number to be called . . . 16
Changing previously set external destination number 17
Changing previously set internal destination number 17
Deactivating the room monitor remotely 17

Setting the Walky-Talky mode . . 17
Activating Walky-Talky mode 18
Deactivating Walky-Talky mode 18
Using a handset in Walky-Talky mode as a room monitor 18

Handset settings 18
Shortcuts for functions and numbers 18
Changing the display language 20
Setting the display 20
Setting screen picture 20
Setting night mode 20
Activating/deactivating auto answer . 20
Adjusting the loudspeaker volume . . . 21
Changing ringtones 21
Sound Manager 22
Activating/deactivating advisory tones 23
Setting the alarm clock 23
Setting an appointment 23
Displaying missed appointments, anniversaries 24
Emergency number 25
Restoring the handset default settings 25

Appendix 26
Care 26
Contact with liquid 26
Questions and answers 26
Service (Customer Care) 27
Specifications 28
PC Interface 29
Writing and editing text 29

Accessories 31

Index 32

Safety precautions

Caution:
Read the safety precautions and the user guide before use. Explain their contents to your children, and the potential hazards associated with using the phone.

Only use the mains adapter supplied, as indicated on the underside of the charging cradle.

Fit only the **recommended, rechargeable batteries** (page 28)! Do not use any other battery type or non-rechargeable batteries as this could result in significant health risks and personal injury.

Insert rechargeable batteries as indicated by their polarity symbols, and use them according to this user guide (polarity symbols can be seen in the handset's battery compartments).

The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment (e.g. doctor's surgery).

The handset may cause an unpleasant humming noise in hearing aids.

Do not install the charging cradle in bathrooms or showers. The handset and charging cradle are not waterproof (page 26).

Switch off your phone (incl. Walky-Talky function) while on board an aircraft. Ensure that it cannot be switched on again accidentally.

Do not use the phone in environments subject to explosion hazard (e.g. paint workshops).

If you give your Gigaset to someone else, make sure you also give them the operating manual.

Dispose of the batteries and phone in accordance with environmental regulations.

Note:
Not all of the functions described in this user guide are available in all countries.

Gigaset S44 – a handset with many extras

Your Gigaset S44 not only provides you with the possibility to store up to 200 phone numbers and e-mail addresses (page 11) – your Gigaset S44 can do a lot more:

- You can programme the keys of your phone with important numbers or frequently used functions. The number is then dialled or the function started by simply pressing a key (page 19).
- You can designate important people as VIPs so you can tell important calls by the ringer melody (page 12).
- Store a voice pattern for important directory entries – the phone will dial on voice command (page 14).
- You can store appointments (page 23) and anniversaries (page 13) on your phone and it will remind you of them in advance.

Have fun using your new Gigaset S44!

Setting up the phone for use

The pack contains:

- one Gigaset S44 handset,
- one charging cradle (incl. mains adapter),
- two batteries,
- one battery cover,
- one belt clip,
- one set of operating instructions.

Connecting up the charging cradle and mounting it on the wall (if required) is described at the end of these instructions.

Inserting the batteries

Caution:
Use only the rechargeable batteries recommended by Siemens on page 28! Under no circumstances should you use a conventional (non rechargeable) battery or other battery types as this could cause significant damage to health and property, e.g. the outer casing of the batteries could be destroyed or the batteries could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

▶ Fit the batteries with the **correct** polarity (see figure).

The polarity is indicated in/on the battery compartment.

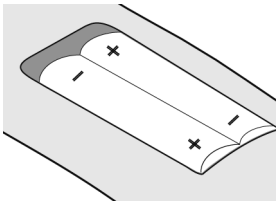

Closing the battery cover

▶ Position the cover so that the compartment is only slightly open and push it up until it clicks into position.

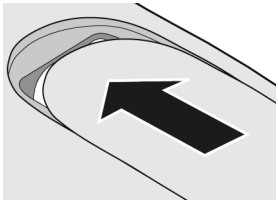

Opening the battery cover

▶ Press below the upper curve on the battery cover and slide down.

Registering your phone

Before you can use your Gigaset S44 you must register it to a base station. It can be registered to a maximum of four base stations. The actual registration procedure will depend on the type of base station.

Automatic registration Gigaset S44 to Gigaset S440/S445

Important: The handset must not already be registered to any base station.

The handset registers automatically to the Gigaset S440/S445 base station.

- Place the handset in the base station with its **display facing forward**.

Registration takes about 1 minute. During this process, **Regstr.Procedure** appears in the display and the name of the base station, e.g. **Base 1**, flashes. When the handset has registered, its screen displays its internal number, e.g. **INT 2** for internal number 2. The handset will be assigned the lowest unassigned number (1–6). If all internal numbers 1-6 have been assigned, number 6 is overwritten, if the handset with the internal number 6 is in idle status.

Note:

- Automatic registration is only possible while no-one is making calls using the base station.
- Each key press cancels automatic registration.
- If automatic registration does not work, you will have to register the handset manually.

Manual registration Gigaset S44

If the handset does not activate automatically when the batteries are fitted, you have to charge the batteries first.

You must activate manual registration of the handset at both the handset and the base station.

After it has registered, the handset returns to idle status. The internal number of the handset appears in the display, e.g. **INT 1**. Otherwise repeat the procedure.

1. On the handset

→ → **Handset** → **Register H/Set**

Select base station, e.g. **Base 1** and press **OK**.

Enter the system PIN of the base station (the default is 0000) and press **OK**. You will see, e.g. **Base 1**.

2. On the base station

Start registration on the base station within 60 seconds as described in the base station's instructions.

Charging batteries

- Plug the mains adapter of the charging cradle into a mains power socket.
- Place the handset in the cradle with its display facing forward.

To charge the batteries, leave the handset in the charging cradle. If the handset is activated, the battery charging process is indicated on the handset by the flashing battery icon. During handset operation, the battery icon indicates the charge status of the batteries (page 1).

First battery charge and discharge

The correct charge status can only be displayed when the batteries are first fully charged **and** discharged.

- To do this, leave the handset in the charging cradle **without interruption** for **10** hours. Your handset need not be switched on to charge.
- Once the batteries are fully charged, remove the handset from the cradle and do not put it back again until the batteries are fully discharged.

Note:
- The handset should only be placed in a base station or charging cradle that is designed for it.
- When the handset is in the cradle, it charges even if it is switched off.
- If the handset has switched itself off because the batteries are flat and if it is then placed in the cradle, it will switch itself on automatically.
- After the first battery charge **and** discharge you may replace your handset in the charging cradle after every call.

Please note:

- Always repeat the charging and discharging procedure if you remove the batteries from the handset and insert them in again.
- The batteries may warm up as they are charging. This is not dangerous.
- After a while the charge capacity of the batteries will decrease for technical reasons.

Attaching the belt clip

There are notches on the side of the handset side at approximately the same height as the display for attaching the beltclip.

▶ Press the belt clip onto the back of the handset so that the protrusions on the belt clip click into the notches.

The belt clip's clasp must be pointing towards the battery compartment.

Changing the base station

If your handset is registered to more than one base station, you can set it to a particular base or to the base station that has the best reception (**Best Base**).

→ → **Handset** → **Select Base**

Select one of the registered base stations or **Best Base** and press **OK**.

Changing the name of the base station

The names "Base 1" to "Base 4" are assigned automatically. You can change the name of your base station.

→ → **Handset** → **Select Base**

Select base station and press **Edit**.

Enter new name, max. of 16 characters (page 29).

Save Press the display key to save the setting.

Press and **hold** (idle status).

Activating/deactivating the handset

Press the end call key and **hold**. You hear the confirmation beep.

Activating/deactivating the keypad lock

Press the hash key and **hold**.

You hear the confirmation beep. The icon appears in the display when the keypad lock is activated.

The keypad lock deactivates automatically if someone calls you. It re-activates when the call is finished.

Note:
You can call emergency numbers (page 25), even when the keypad lock is activated.

Setting the date and time

If you have not yet set the date and time, press the display key **Time** to open the input field.

To change the time, open the input field via:

→ → **Date/Time**

▸ Changing multiple line input:

Date:
Enter day, month and year in 6-digit format.

Time:
Enter hours and minutes in 4-digit format, e.g. 0 + 7 pqrs 1 مه 5 jkl for 7:15 a.m.

Save Press the display key.

Using the phone

Control key

In this user guide, the side of the control key that you will have to press in the relevant operating situations is marked black (up, down, right, left) (e.g. for "press right of the control key").

The control key has a number of different functions:

When the handset is in the idle state

- Open the directory.
- Open main menu.
- Open list of handsets.
- Press **briefly**: Setting handset ringtones (page 21).
  Press and **hold**: Initiate voice dialling (page 14).

In the main menu and in input fields

Using the control key you can move the cursor up, down, right or left .

In lists and submenus

- / Scroll up/down line by line.
- Open submenu or confirm selection.
- Go back one menu level, or cancel.

During an external call

- Open the directory.
- Open menu.
- Initiate a consultation call.
- Adjust loudspeaker volume for earpiece and handsfree mode.

Display keys

The functions of the display keys change depending on the particular operating situation. Example:

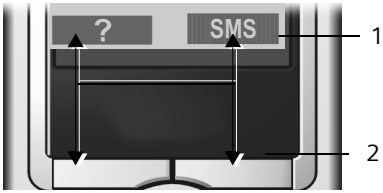

1 The display keys' current functions are shown in the bottom display line.
2 Display keys

Press the display key below to launch the function.

The most important display symbols are:

?	Left display key, as long as it has not been assigned a function (page 18).
▸☰	Open the main menu or a context dependent menu.
◂C	Delete key: backspace deletes one character at a time.
↩	Go back one menu level or cancel operation.

EMail Open email directory.

Copying number into the directory.

On bases with built-in answering machines: forward external call to answering machine.

Open last number redial list (depending on the base station).

Return to idle status

You can return to idle status from anywhere in the menu by proceeding as follows:

▶ Press the end call key and **hold**.

Or:

▶ Press no keys: After 2 minutes the display will return **automatically** to its idle status.

Changes which you have not confirmed or saved by pressing OK, Yes, Save, Send or Save Entry OK will be lost.

An example of the display in the idle status is shown on page 1.

Menu management

Your phone's functions are accessed in a menu that has a number of levels.

Main menu (first menu level)

Press with the handset in idle status to open the main menu.

The main menu functions are displayed on the display as coloured icons.

Accessing a function, i.e. opening the corresponding submenu (next menu level):

▶ Navigate to the function using the control key (and). The name of the function is displayed in the screen's header row. Press the display key OK.

Submenus

The functions in the submenus are displayed as lists.

Accessing a function:

▶ Scroll to the function with the control key and press OK.

To return to the previous menu level or to cancel an operation, **briefly** press the end call key.

Correcting wrong inputs

You can correct wrong characters in the text by navigating to the wrong input using the control key. You can then:

- Press C to delete the character to the left of the cursor,
- Insert characters to the left of the cursor,
- When entering the time and date etc., overwrite the (flashing) character.

Notes on the user guide

This section explains the meaning of certain symbols and typographical conventions that are used in this user guide.

Symbols

Copy Entry / Copy List (example)
Select one of the two menu functions specified.

Enter digits or letters.

Save
The display keys' current functions are shown reverse-highlighted in the bottom display line.

Press the top or the bottom of the control key: scroll up or down.

Press the right or left of the control key: e. g. select setting.

/ 0 + / * etc.
Press the matching key on the handset.

Example: menu input

This user guide uses symbols to guide you through the setting of your phone. The example below ("setting the colour scheme") shows you how to read the symbols and gives explanations in the text boxes.

→ → **Display**

- With the handset in idle status, press on the right of the control key to open the main menu.
- Select the icon using the control key – press the control key right, left, up or down.

In the display header, **H/Set Settings** is displayed.

- Press **OK** on the display key to confirm the function **H/Set Settings**.

You will see the submenu **H/Set Settings**.

- Press the bottom of the control key repeatedly until **Display** is selected.
- Press **OK** on the display key to confirm the function.

Colour Scheme
Select and press **OK**.

- Press the bottom of the control key repeatedly until **Colour Scheme** is selected.
- Press **OK** on the display key to confirm the function.

Select a colour scheme and press **OK** (✓ = current colour).

- Press the top or bottom of the control key to select a colour scheme.
- Press **OK** on the display key to confirm the function.

The selected colour scheme is marked with ✓.

Press and **hold** press (idle status).

- Press and hold the end call key until the handset returns to idle status.

Example: multiple line input

There are many situations in which you can change the settings of a display or enter data in several lines.

In this user guide, sequences of symbols are used to show you multiple line input. This system is explained using the example of "storing appointments". Explanations are given in the text boxes.

The display shows:

Appoint.:
Select **On** or **Off**.

- Press right or left ( ) on the control key to select **On** or **Off**.

Date:
Enter day/month in 4-digit format.

- Press the key to move to the next line.

The second line is marked with [ ] to show it is activated.

- Enter the date using the digit keys.

Time:
Enter hours/minutes in 4-digit format.

▶ Press the ⊕ key.
The third line is marked with [ ] to show it is activated.
▶ Enter the date using the digit keys.

Notes:
Press the display key **Edit**. Enter text (max. of 16 characters) and press **OK**.

▶ Press the ⊕ key.
The fourth line is marked with < > to show it is activated.
▶ Press the display key **Edit** to open the input field. Enter the text (page 29).
▶ Press the display key **OK**.

▶ Save changes.
You will see the ⏰ icon.

▶ Press the display key **Save**.
▶ Subsequently press and **hold** the end call key.
The handset will change to idle status and display the icon ⏰.

Making calls

Making an external call

External calls are calls using the public phone network.

Enter the number and press the talk key.

Or:

Press and **hold** the talk key and then enter the number.

You can cancel the dialling operation with the end call key.

Note:
- Dialling using the directory, call-by-call list (page 1, page 11) or last number redial list (page 8, page 15) saves you from re-entering numbers and network providers' prefixes ("call-by-call numbers").
- You can program the keys of your phone with numbers from the directory (page 18).
- With voice dialling, you can dial numbers simply by saying the name (page 14).

End call

Press the end call key.

Answering a call

There are three ways of indicating incoming calls: ringing, a display on the screen and the flashing handsfree key.

To accept an incoming call:

▶ Press the talk key.

or

▶ Press the handsfree key.

If the handset is in the charging cradle and the **Auto Answer** function is activated (page 20), the handset will accept a call automatically when you lift it out of the cradle.

If the ringtone is intrusive press the display key **Silence**. You can take the call so long as it is displayed on the screen.

Handsfree talking

With handsfree talking, instead of holding the handset to your ear you can put it down, e.g. on the table in front of you, to allow others to listen and speak to the caller.

Activating/deactivating handsfree

Activating while dialling

Enter the number and press the handsfree key.

▶ You should inform your caller before you use the handsfree function so that they know someone else is listening.

Switching between earpiece and handsfree mode

Press the handsfree key.

Switch handsfree on or off during a call.

If you wish to place the handset in the charging cradle during a call:

▶ Press the handsfree key and hold it while placing the handset in the base station. If handsfree key does not light up, press the key again.

To find out how to adjust the volume, see page 21.

Muting

You can deactivate the microphone in your handset during an external call. The other party hears a wait melody.

Press the control key on the left to mute the handset.

Press the display key to reactivate the microphone.

Making internal calls

Internal calls to other handsets registered on the same base station are free.

Calling a specific handset

Initiate internal call.

Enter the number of the handset.

Calling all handsets ("group call")

Initiate internal call.

Press the star key. All handsets are called.

Ending calls

Press the end call key.

Using the directory and lists

You can store a maximum of 200 entries in the directory, call-by-call list and email directory (the actual number depends on the size of the individual entries).

You create a personalised directory, email directory and call-by-call list for your own individual handset. You can, however, send lists/entries to other handsets or the base station (page 13).

Directory and call-by-call list

In the **directory**, you store numbers and matching names.

▶ With the handset in idle status, open the directory by pressing .

In the **call-by-call list**, you can store prefixes of network providers (so-called "call-by-call numbers").

▶ Open the call-by-call list using the key.

Length of entries

Number: max. 32 digits
Name: max. 16 characters

Note:
To create a shortcut to a number from the directory or the call-by-call list (speed dialling), you can assign a number to a key (page 19).

Storing a number in the directory

→ **New Entry**

▶ Changing multiple line input:

Number:
Enter number.

Name:
Enter name.

Annivers.:
Enter anniversary as required (page 13).

▶ Save changes.

If your phone is connected to a PABX, you have to enter an access code. To this end, please read the operating instructions for your PABX.

Storing a number in the call-by-call list

→ **New Entry**

▶ Changing multiple line input:

Number:
Enter number.

Name:
Enter name.

▶ Save changes.

Selecting a directory/ call-by-call list entry

/ Open directory or call-by-call list.

You have the following options:

- Use to scroll until the required name is selected.
- Enter the first characters (max. 10) of the name or scroll to the entry using .

Dialling using the directory/ call-by-call list

/ → (Select entry)

Press the talk key. The number is dialled.

Managing directory/ call-by-call list entries

/ → (Select entry)

Viewing an entry

View Press the display key. The entry is displayed. Return with OK.

Editing an entry

View Edit

Press display keys one after the other.

▶ Make and save changes.

Using other functions

/ → (Select entry) → (open menu)

The following functions can be selected with :

Display Number
Edit or add a stored number. Then dial or use other functions by pressing .

Edit Entry
Edit a selected entry.

Delete Entry
Delete a selected entry.

VIP Entry (directory only)
Mark a directory entry as **VIP** (Very Important Person) and assign it a particular ringtone. You will now be able to tell VIP calls by the ringtone.
Requirement: caller display ("CLIP")

Record Pattern (directory only)
Speak the name of the selected entry and store as voice pattern (page 14).

Play Pattern (directory only)
Play voice patterns (page 14).

Delete Pattern (directory only)
Delete voice patterns (page 14).

Copy Entry (dependent on receiving handset)
Send a single entry to a handset (page 13).

Delete List
Delete **all** entries in the directory or call-by-call list.

Copy List (dependent on receiving handset)
Send complete list to a handset (page 13).

Available Memory
Display the available entries in the directory, call-by-call list (page 11) and email directory (page 14).

Sending the directory/call-by-call list to another handset

Requirements:

- The sending and receiving handsets must both be registered to the same base station.
- The other handset and base station can send and receive directory entries. To this end, please read the relevant user guide.

◁▷ / ⌂ ➜ ◁▷ (Select entry) ➜ ◁▷ (open menu) ➜ **Copy Entry** / **Copy List**

Enter the internal number of the receiver handset. You see **Copying entry**.

Yes / **No** Press the display key.

A successful transfer is confirmed by a message and the confirmation tone at the receiver handset.

Please note:

- Entries with identical numbers are not overwritten in the receiver handset.
- The transfer is cancelled if the phone rings or if the memory of the receiving handset is full.

Storing anniversaries in the directory

You can store an anniversary for every number in the directory, and specify a time when you will receive a reminder call on the anniversary.

◁▷ ➜ ◁▷ (Select entry; page 12)

View **Edit** Press display keys one after the other.

◁▷ Scroll to the **Annivers.:** line.

Edit Press the display key.

▸ Changing multiple line input:

Date:
Enter day/month in 4-digit format.

Time:
Enter the hour/minute for the reminder call in 4-digit.

Prompt:
Select the type of signal for the reminder and press **OK**.

▸ Save changes (page 10).

Note:
Reminder calls require a time stamp. If you select an optical signal, then a time stamp is not required and is automatically set to 00.00.

Deleting anniversaries

◁▷ ➜ ◁▷ (Select entry; page 12)

◁▷ Scroll to the **Annivers.:** line.

Edit **Delete** **Save** Press display keys one after the other.

Reminder call on an anniversary

A reminder call is signalled on the handset with the selected ringtone.

Silence Press the display key to stop the reminder call.

Voice dialling

You can dial numbers from the directory by saying the name. To enable your phone to recognise your voice, you have to record a voice pattern for every name, i. e.say the name loudly to the handset and store it.

You can also set your telephone to announce the name of the caller instead of ringing for an external call, see page 21.

You can store a voice pattern for a **total** of 30 directory entries. Entries assigned voice patterns are marked with ⌓.

Recording voice patterns

Record your voice pattern in quiet surroundings. The handset should be around 25 cm (10 inches) away from you. The voice pattern can be 1.5 seconds long.

Note:
If you use voice dialling usually with a hands-free set, then it is advisable to record the voice pattern via the handsfree set.

◉ ➜ ◉ (Select entry; page 12)

◉ Open menu.

Record Pattern
Select.

OK Press the display key to start the recording.

You will hear a short beep. The display will prompt you accordingly. Speak the name. Repeat the name after being prompted to do so by the display and a further beep.

Note:
If the phone's memory cannot accommodate a new voice pattern, a message will appear on the display. The handset will automatically return to the directory. Delete a voice pattern and select **Record Pattern** once again.

To **change** a voice pattern, you must delete it (page 14) and re-record it.

Using voice dialling

◉ Press and **hold**.

Speak the name after the beep. If the name corresponds with the recorded voice pattern, it will be repeated and the number will be dialled.

Playing voice patterns

◉ ➜ ◉ (Select entry with ⌓)

◉ Open menu.

Play Pattern
Select and press OK. The voice pattern will be played in handsfree mode.

Press and **hold** (idle status).

Deleting voice patterns

◉ ➜ ◉ (Select entry with ⌓)

◉ Open menu.

Delete Pattern
Select and press OK.

Press and **hold** (idle status).

The directory entry is retained.

Email directory

You can store email addresses in the email directory.

Saving a new email address

◉ Open the directory.

<E-Mail Directory>
Select and press OK.

New Entry Select and press OK.

Enter email address (max. 60 characters).

▸ Save changes (page 10).

During entry, you can open the menu with ☰ and use the following functions:

Insert '.' / Insert '@'
Insert a dot or @.

Managing email addresses

➔ <E-Mail Directory>
➔ (Select entry; page 12)

Viewing entries

View — Press the display key. The entry will be displayed. Return with OK.

Editing entries

View Edit — Press display keys one after the other.

▶ Make and save changes (page 10).

Using other functions

➔ <E-Mail Directory>
➔ (Select entry; page 12)
➔ (open menu)

As with the directory (page 12), you can select the following functions with :

Edit Entry

Delete Entry

Delete List

Last number redial list

The last number redial list shows the last ten numbers dialled on the handset (max. 32 digits). If one of the numbers is in the directory, then the corresponding name will be displayed.

Manual last number redial

Press the talk key **briefly**.

Select entry.

Press the talk key again. The number is dialled.

When displaying a name, you can have the respective phone number displayed by using the display key View.

Managing entries in the last number redial list

Press the talk key **briefly**.

Select entry.

Open menu.

The following functions can be selected with :

Automatic Redial
The number is automatically dialled at regular intervals (at least every 50 seconds) and the handsfree key flashes, "open listening" is activated.
– Participant answers: press the talk key . The function is ended.
– Participant doesn't answer: the call is terminated after approx. 30 seconds. The function is ended after pressing any key or ten unsuccessful attempts.

Display Number (page 12)

Copy to Directory
Copy an entry to the directory (page 11).

Delete Entry (page 12)

Delete List (page 12)

Viewing calls and messages list

In idle status, the handset screen displays an icon for new calls or messages. The number of new entries is shown beneath the corresponding icon. An advisory tone sounds as soon as a **new message** arrives on a list. The message key flashes.

Press the flashing key to open the lists that contain new messages.

Using a handset as a room monitor

If the room monitor is activated, a previously stored destination number is called as soon as soon as a set noise level is reached. You can store an internal or external number on your handset as the destination number.

The room monitor call to an external number stops after approx. 90 seconds. The room monitor call to an internal number (handset) stops after approx. 3 minutes (depending on the base station). While the room monitor is activated, all keys are locked except the end call key. The handset's speaker is muted.

When the room monitor is activated, incoming calls to the handset are indicated **without a ringtone** and are only shown on the screen. The display and keys are not illuminated and advisory tones are also turned off.

If you accept an incoming call, the room monitor mode is suspended for the duration of the call, the function **remains** activated.

If you switch off the handset, the room monitor mode is ended. You must reactivate the function after switching on the handset again.

Note:

- **You should always check the operation of the room monitor before use. For example, test its sensitivity. Check the connection, if you are diverting the room monitor to an outside number.**
- The active room monitor function considerably reduces the operating time of the handset. Place the handset in the charging cradle if necessary. This ensures that the battery does not discharge.
- Ideally the handset should be positioned 1 to 2 metres away from the baby. The microphone must be directed towards the baby.
- The connection to which the room monitor is diverted must not be blocked by an activated answering machine.

Activating the room monitor and entering the number to be called

◯ → ✉ → Room Monitor

▶ Changing multiple line input:

Room M.:
Select On to activate.

Call to:
Press the display key Edit and enter destination number.

External number: select number from the directory or enter directly. Only **the last 4 digits** are displayed.

Internal number: INT and depending on the base station either ◯ (select handset) or ⌨ (enter number of handset) and OK. If all handsets registered on the base station should be called, select Call All.

Store number with ☰ Save Entry OK.

Level:
Set sensitivity for the noise level (Low or High).

▶ Save changes (page 10).

The function is now activated. With ◯, you can change directly to settings.

Changing previously set external destination number

→ → **Room Monitor**

Scroll to the **Call to:** line.

Edit Press the display key.

C Delete existing number.

- Enter number as described in "Activating the room monitor and entering the number to be called" (page 16).
- Save changes (page 10).

Changing previously set internal destination number

→ → **Room Monitor**

Scroll to the **Call to:** line.

Edit Press the display key.

Yes Press the display key to confirm the prompt.

- Enter number as described in "Activating the room monitor and entering the number to be called" (page 16).
- Save changes (page 10).

Deactivating the room monitor remotely

Requirements: The phone must support touch tone dialling and the room monitor is set for an external destination number.

- Take the call from the room monitor and press keys 9 #.

The room monitor function will deactivate after the call ends. There will be no further room monitor calls. The other room monitor settings (e. g. no ringtone) on the handset will remain activated until you press the display key **Off** on the handset.

To reactivate the room function with the same phone number:

- Turn on the activation again and save with **Save** (page 16).

Setting the Walky-Talky mode

The Walky-Talky function allows two handsets to communicate with each other no matter how far they are from the base station.

Example: You go on holiday and take two handsets with Walky-Talky functionality with you. Set the Walky-Talky function **on both handsets**.

Requirement:

One of the following requirements must be met.

- Both handsets are registered to the same base station.
- Both handsets are registered to different bases and both are set to **Best Base** (page 6).
- One of the handsets is not registered to any base station and the registered handset is set to best base.
- Neither handset is registered to a base station.

Please note:

- In Walky-Talky mode, the range between the handsets is a maximum of 300 m in the open.
- The handsets cannot be reached by incoming calls.
- The Walky-Talky mode severely shortens the handset operating times.
- The Walky-Talky mode is retained even when you switch your handset off and back on.

Activating Walky-Talky mode

→ → **Walky-Talky**

If, when you are in Walky-Talky mode, you press the talk key or handsfree key , the call will go to all the handsets that are in Walky-Talky mode. The connection is made with the first handset to answer the Walky-Talky call.

- The loudspeaker volume and advisory tones are set in exactly the same way as if your handsets were in range of the base station (page 21).
- "Activate/deactivate ringtone" (page 21) and "Activate/deactivate keypad lock" (page 6) are available in Walky-Talky mode.
- To open the menu, press the display key .

Deactivating Walky-Talky mode

OFF Press the display key.

Using a handset in Walky-Talky mode as a room monitor

This function allows you to use the Walky-Talky mode as a room monitor. The room monitor will then call all handsets that are in Walky-Talky mode as soon as the previously set noise level has been reached.

During the call, all keys are locked except the end call key. The room monitor function **remains active** after you end the call. It must be activated again if the handset has been switched off.

Note:

- **You should always check the operation of the room monitor before use. Always check e.g. the sensitivity and phone line.**
- The active room monitor function considerably reduces the operating time of the handset. Place the handset in the charging cradle if necessary. This ensures that the battery does not discharge.
- The handset should be positioned 1 to 2 meters away from the baby. The microphone must be directed towards the baby.
- Please note that the Walky-Talky function's room monitor does not provide optimum security.

Activating/deactivating the room monitor

Press the display key.

Room Monitor

Select and press **OK**.

Room M.:

Select **On** to activate. Select **Off** to deactivate.

Level:

Set the sensitivity for the desired noise level (**Low** or **High**).

▶ Save changes.

The room monitor has now been activated/deactivated.

Handset settings

Your handset is preconfigured, but you can change the settings to suit your individual requirements.

Shortcuts for functions and numbers

You can assign the left display key and the digit keys 0 + and 2 abc to 9 wxyz with a number or a function each.

The number is then dialled or the function started by simply pressing a key.

Assigning a digit key/left display key

Requirement: The digit key or the left display key has not yet been assigned a number or a function.

▶ Press the display key ? or press and **hold** the digit key.

The list of possible key assignments is opened. The following can be selected:

Quick Dial / Call-by-Call
Assign key to a number from the directory or call-by-call list.

The directory or call-by-call list is opened.

▶ Select an entry and press OK.

If you delete or edit an entry in the directory or call-by-call list, this has no effect on the assignment to the digit/display key.

Room Monitor
Assign key to the menu for setting and activating the room monitor (page 16):

→ **Room Monitor**

Set Appoints. / Alarm Clock
Assign key to the menu for setting and activating an appointment/the alarm clock (page 23):

→ **Set Appoints. / Alarm Clock**

Depending on the base station, the following additional functions may be available:

Answer M. Mode
Assign key to the menu for selecting the answering machine mode.

Withhold No.
Withhold phone number identification for next call.

Info Services
Assign key to the menu for ordering info services.

SMS Notific.
Assign key to the menu for activating SMS notification.

Note:
If a function menu is opened via a shortcut, pressing briefly on the end call key will return the handset to idle status (not to the next higher menu).

If the left display key has been assigned a shortcut, the selected function or name of the phone number in the directory or call-by-call list is displayed (abbreviated if necessary) in the bottom display line.

Starting the function, dialling the number

If the handset is in idle status, press and **hold** the digit key or press the display key **briefly**.

Depending on the key assignment:

- Numbers are dialled directly.
- Function menu is opened.

Changing key assignment

Display key

▶ Press and **hold** the left display key.

The list of possible key assignments is opened.

▶ Proceed as is described when first assigning the key with a short cut (page 19).

Digit key

▶ Press and **hold** digit key.

Change — Press the display key. The list of possible key assignments is displayed.

▶ Proceed as is described when first assigning the key with a shortcut (page 19).

Changing the display language

You can view the display texts in different languages.

→ → **Handset** → **Language**

The current language is indicated by ✓.

Select a language and press **OK**.

Press and **hold** (idle status).

If you accidentally choose a language you do not understand:

5 3 1

Press keys one after the other.

Select the correct language and press **OK**.

Setting the display

You have a choice of four colour schemes and several different contrasts.

→ → **Display**

Colour Scheme

Select and press **OK**.

Select a colour scheme and press **OK** (✓ = current colour).

Press **briefly**.

Contrast Select and press **OK**.

Select contrast.

Save Press the display key.

Press and **hold** (idle status).

Setting screen picture

You can display a screen picture when the handset is in idle status. This will replace the idle status display. It may conceal the date, time and name.

The screen picture is now displayed in certain situations, e.g. during a call or when the handset has been deregistered.

If a screen picture has been activated, the menu item **Screen Picture** is marked with ✓.

→ → **Display** → **Screen Picture**

The current setting is displayed.

▶ Changing multiple line input:

Activation:

Select **On** (screen picture is displayed) or **Off** (no screen picture).

Picture:

Change screen picture if necessary (see below).

▶ Save changes (page 10).

If the screen picture conceals the display, press any key briefly to show the idle display with time and date.

Changing screen picture

→ → **Display** → **Screen Picture**

Scroll to the line **Picture:**.

Select picture and press **OK**.

▶ Save changes.

Setting night mode

If the handset is in the charging cradle, the display is dimmed. If this bothers you, you can set the handset to night mode. The display is then completely dark when that handset is in the charging cradle.

→ → **Display**

Night Mode Select and press **OK** (✓ = on).

Press and **hold** (idle status).

Activating/deactivating auto answer

If you have activated this function, when you get a call, you can simply lift the handset out of the charging cradle without having to press the talk key .

→ → **Handset**

Auto Answer

Select and press **OK** (✓ = on).

Press and **hold** (idle status).

Adjusting the loudspeaker volume

You can set the loudspeaker volume for handsfree speaking to five different levels and the earpiece volume to three different levels. You can only make these adjustments during an external call.

The handsfree volume can only be adjusted when handsfree talking is set (page 10).

You are conducting an external call.

⊛	Open menu.
⊛	Select volume.
Save	Press display key if necessary to save the setting permanently.

If ⊛ is assigned a different function, e.g. toggling:

⊛	Open menu.
Volume	Select and press OK.

Configure setting (see above).

Changing ringtones

- Volume:
  You can choose between five volumes (1–5; e.g. volume 2 = ▂▃□□□) and the "Crescendo" ring (6; volume increases with each ring = ▂▃▅▆▇).
- Ringtones:
  You can select any sound from the Sound Manager (page 22).

You can configure the following functions with different ringtones:

- **Ext. Calls**: For external calls
  If you wish to change the settings for ISDN base stations, please consult the base station user guide.
- **Internal Calls**: For internal calls
- **Appointments**: For set appointments (page 23)
- **Alarm**: For a pre-set wake-up call (page 23)
- **All**: The same for all functions

Settings for individual functions

Set the volume and melody depending on the type of ringing. For external calls, you can choose to have the name of the caller announced. This requires the corresponding voice pattern to be recorded beforehand (page 14).

⊛ → ♫ → **Ringer Settings**

⊛	Select setting, e.g. **Ext. Calls**, and press OK.
⊛	Set volume (1–6).
⊛	Scroll to the next line.
⊛	Select melody.
⊛	**Announce** activate or deactivate.

▶ Save changes (page 10).

In idle status, you can also open the menu **Ringer Settings** by pressing ⊛ **briefly**.

Same settings for all functions

⊛ → ♫ → **Ringer Settings** → **All**

▶ Set volume and ringtone (see "Settings for individual functions").

Yes	Press the display key to confirm the prompt.
☎	Press and **hold** (idle status).

Activating/deactivating the ringtone

Before answering a call or while your handset is in idle status, it is possible for you to cancel the ringtone permanently or for the current call. The ringtone cannot be re-activated while an external call is in progress.

Cancelling the ringtone permanently

*	Press the star key and hold until you can no longer hear the ringtone.

The 🔕 icon appears in the display.

Re-activating the ringtone

(*) Press the star key and **hold**.

Cancelling the ringtone for the current call

Silence Press the display key.

Activating/deactivating the alert tone

Instead of a ringtone, you can activate an alert tone. When you get a call, you will hear **a short tone** ("Beep") instead of the ringtone.

(*) Press and **hold** the star key and **within 3 seconds:**

Beep on Press the display key. A call is now signalled by **one** brief alert tone. You will now see 🔔 in the display.

Sound Manager

The handset's Sound Manager manages ringtones and sounds which you can use as ringtone melodies. It can manage the following sound types:

Icon	Sound	Format
🔔	Ringtones; monophonic	Standard
♫	Polyphonic	Standard
♫	Polyphonic	.psf
♪	Monophonic	iMelody

The icon is displayed in front of the name in the Sound Manager. Your phone has 3 🔔 and 17 ♫ as default settings. You can neither delete or rename these default sounds.

You can download sounds in .psf- and iMelody format from a PC (page 29).

You can listen to existing sounds and rename or delete sounds that you have downloaded onto your handset.

Playing back sounds

(◉) → 🖼 → (◉) (Select entry)

Play Press the display key. Sounds are played. Change between entries using the key (◉).

End Press the display key. Play back is ended.

(📞) Press and **hold** (idle status).

Whilst you are playing sounds, you can adjust the volume using the display key Volume.

If you have saved a sound in an invalid data format, you will receive an error message after selecting the entry. The operation is cancelled by pressing ↩.
The sound is deleted by pressing Delete.

Renaming/deleting sounds

You have selected an entry. If a sound cannot be deleted (🔒), these options are not available.

(◉) Open menu.

Depending on the situation, you can select the following functions:

Rename
Select and press OK. Change name (max. 16 characters, do not use spaces or special characters) and press OK. The entry is saved with its new name.

Delete Entry
The selected entry is deleted. A deleted ringtone melody is automatically replaced. A deleted ringtone melody for VIP calls or anniversaries is not automatically replaced.

Activating/deactivating advisory tones

Your handset uses 'advisory tones' to tell you about different activities and statuses. The following advisory tones can be activated and deactivated independently of each other:

- **Key beep**: Each key press is acknowledged.
- **Acknowledge tones**:
  - **Confirmation tone** (ascending tone sequence): at the end of entry/setting and when an SMS or a new entry in the answering machine list (depending on base station) or in the call list arrives.
  - **Error beep** (descending tone sequence): when you make an incorrect entry
  - **Menu end tone**: when scrolling at the end of a menu
- **Battery low beep**: the battery requires charging.

→ → **Advisory Tones**

▶ Changing multiple line input:

Key Tones:
Select **On** or **Off**.

Confirm.:
Select **On** or **Off**.

Battery:
Select **On**, **Off** or **In Call**. The battery warning tone is activated or deactivated or only rings during a call.

▶ Save changes (page 10).

You cannot deactivate the confirmation tone for placing the handset in the charging cradle.

Setting the alarm clock

Requirement: the date and time have already been set (page 7).

Activating/deactivating the alarm clock and setting the wake-up time

→ → **Alarm Clock**

▶ Changing multiple line input:

Alarm Clock:
Select **On** or **Off**.

Time:
Enter the wake-up time in 4-digit format.

▶ Save changes (page 10).

You will see the icon .

A wake-up call with the selected ringtone (page 21) is signalled on the handset. The wake up call sounds for 60 seconds. The display shows **Alarm Clock**.

During a call, the wake-up call is signalled by a short tone.

Deactivating the wake-up call

Requirement: The alarm clock is ringing.

Silence Press the display key or any key.

Setting an appointment

You can be reminded about up to 5 appointments by your handset (volume and melody, see page 21).

Saving appointments

Requirement: the date and time have already been set (page 7).

➔ ➔ **Set Appoints.**

The list of stored appointments is displayed. If you have already saved five appointments, then you must delete an existing one.

<New Entry>
Select and press **OK**.

▶ Changing multiple line input:

Appoint.:
Select **On** or **Off**.

Date:
Enter day/month in 4-digit format.

Time:
Enter hours/minutes in 4-digit format.

Notes:
Press the display key **Edit**. Enter text (max. of 16 characters) and press **OK**. The text appears as the appointment name in the list and will be displayed on the screen during the appointment reminder. If no text is entered, you will see the date and time of the appointment

▶ Save changes (page 10).

You will see the icon . The appointment is marked with ✓ in the appointment list. The appointments are sorted according to the date in the list.

An appointment is signalled with the selected ringtone melody (page 21). The appointment reminder will ring for 30 seconds. It will display the entered text or date and time.

During a call, the appointment reminder is signalled by a short tone.

Managing appointments

➔ ➔ **Set Appoints.** ➔ (Appoint. Select 1–5)

Viewing/editing appointments

View Press the display key. The appointment is displayed. Back with **OK** or:

Edit Press the display key to change entry if required

▶ Make changes.

Using additional menu functions

Open menu.

You have the following options:

Edit Entry
Edit selected appointment.

Delete Entry
Delete selected appointment.

Delete List
Delete **all** appointments.

Switching off an appointment reminder

Requirement: The appointment reminder is ringing.

Silence Press the display key to switch off the appointment reminder.

Displaying missed appointments, anniversaries

Missed appointments/anniversaries (page 13) are displayed in the list **Missed Dates** if:

- You don't accept an appointment/anniversary.
- The appointment/anniversary was signalled during a phone call.
- The handset is deactivated at the time of the appointment/anniversary

The most recent entry is at the start of the list.

If there is a new appointment/anniversary in the list, the display shows Appoint.. Press the display key to open the list Missed Dates.

Opening the list via the menu

→ → Missed Dates

Select appointment/anniversary.
This will display information about the appointment/anniversary. A missed appointment is marked with , a missed anniversary with .

Delete Press the display key to delete the appointment/anniversary.

Press and **hold** (idle status).

If 10 entries are already stored in the list, the oldest entry will be deleted for the next appointment reminder.

Emergency number

When the phone is supplied, 112 is preset as the emergency number. You can edit or delete the emergency number.

You can dial the emergency number even if the keypad lock is activated.

Editing emergency number

→ → Handset → Add. Emerg. No

You can see the emergency number. You **cannot** select the number with from this menu.

Edit emergency number.

Press the display key.

Save Entry Select and press OK. The entry is stored.

Note:
112 is entered again if you return the handset to its default settings. The modified emergency number is deleted.

Dialling the emergency number

You can call the emergency number, even when the keypad lock is activated (page 6).

Enter emergency number.

Press the talk key.

Restoring the handset default settings

You can reset individual settings and changes you have made. This will not affect entries in the directory, call-by-call list, call list, email directory, the handset's registration to the base station or the content of the Sound Manager.

→ → Handset → Reset Handset

Yes Press the display key.

Press and **hold** (idle status).

Cancel the restoring process by pressing or the display key No.

Default settings of the handset

Function	Default setting	Page
Battery tone/Key click/ Confirmation tone	on	page 23
Auto answer	on	page 20
Room monitor	off	page 16
Room monitor: sensitivity/number	high/no number	page 16
Base station selection	Base1	page 6
Display language	country-specific	page 20
Volume: handsfree talking/loudspeaker/ ringtone, alarm clock, appointment	3/1/5	page 21
Screen picture	off	page 20
Night mode	off	page 20
Emergency number	112	page 25

Function	Default setting	Page
EATONI predictive text	on	page 30
Alarm clock/appointment	off	page 23
Character set	standard	page 30

Appendix

Care

- Wipe the charging cradle and the handset with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Contact with liquid ⚠

If the handset has come into contact with liquid:

1. **Switch the handset off and remove the batteries immediately**.
2. Allow the liquid to drain from the handset.
3. Pat all parts dry, then place the handset with the battery compartment open and the keypad facing down in a dry, warm place **for at least 72 hours** (**not** in a microwave, oven etc.).
4. **Do not activate the handset again until it is dry.**

When it has fully dried out you will normally be able to use it again.

Questions and answers

If you have any queries about the use of your handset, you can contact us at any time at www.siemens.com/gigasetcustomercare. The table below contains a list of common problems and possible solutions.

The display is blank.

1. The handset is not switched on.
   - Press and **hold** the end call key.
2. The batteries are flat.
   - Charge or replace the batteries (page 4).

The handset does not respond to a key press.

The keypad lock is activated.
- Press and **hold** the hash key (page 6).

"Base station x" flashes **in the display.**

1. The handset is outside the range of the base station.
   - Reduce the distance between handset/base station.
2. The handset has been de-registered.
   - Register the handset (page 5).

Base Search flashes in the display.

Handset is set for **Best Base** and no base station is within range.
- Reduce the distance between handset/base station.

Handset does not ring.

The ringtone is switched off.
- Activate the ringtone (page 21).

The other party cannot hear you.

You have pressed the (INT) key. The handset is "muted".
- Switch on the microphone again (page 11).

You hear an error tone when keying an input (a descending sequence of tones).

Action has failed/invalid input.
- Repeat the operation.
  Watch the display and refer to the operating instructions if necessary.

Service (Customer Care)

You can get assistance easily when you have technical questions or questions about how to use your device by using our online support service on the Internet at:

www.siemens.com/customercare

or by referring to the section entitled **Questions and answers** in this manual (see page 26).

If the device needs to be repaired, please contact one of our Customer Care Centers:

Abu Dhabi	0 26 42 38 00
Argentina	0 80 08 88 98 78
Australia	18 00 62 24 14
Austria	05 17 07 50 04
Bahrain	40 42 34
Bangladesh	0 17 52 74 47
Belgium	0 78 15 22 21
Bosnia Herzegovina	0 33 27 66 49
Brazil	0 80 07 07 12 48
Brunei	02 43 08 01
Bulgaria	02 73 94 88
Cambodia	12 80 05 00
Canada	1 88 87 77 02 11
China	0 21 50 31 81 49
Croatia	0 16 10 53 81
Czech Republic	02 33 03 27 27
Denmark	35 25 86 00
Dubai	0 43 96 64 33
Egypt	0 23 33 41 11
Estonia	06 30 47 97
Finland	09 22 94 37 00
France	01 56 38 42 00
Germany	01805 333 222
Greece	0 80 11 11 11 16
Hong Kong	28 61 11 18
Hungary	06 14 71 24 44
Iceland	520 3000
India	01 13 73 85 89 - 98
Indonesia	0 21 46 82 60 81
Ireland	18 50 77 72 77
Italy	02 66 76 44 00
Ivory Coast	80 00 03 33
Jordan	0 64 39 86 42
Kenya	2 72 37 17
Kuwait	2 45 41 78
Latvia	7 50 11 14
Lebanon	01 44 30 43
Libya	02 13 50 28 82
Lithuania	8 22 74 20 10
Luxembourg	43 84 33 99
Macedonia	02 13 14 84
Malaysia	03 21 63 11 18
Malta	00 35 32 14 94 06 32
Mauritius	2 11 62 13
Mexico	01 80 07 11 00 03
Morocco	22 66 92 09
Netherlands	0900-3333102
New Zealand	08 00 27 43 63
Norway	22 70 84 00
Oman	79 10 12
Pakistan	02 15 66 22 00
Philippines	0 27 57 11 18
Poland	08 01 30 00 30
Portugal	8 00 85 32 04
Qatar	04 32 20 10
Romania	02 12 04 60 00
Russia	(800) 200 10 10
Saudi Arabia	0 22 26 00 43
Serbia	01 13 22 84 85
Singapore	62 27 11 18
Slovak Republic	02 59 68 22 66
Slovenia	0 14 74 63 36
South Africa	08 60 10 11 57
Spain	9 02 11 50 61
Sweden	0 87 50 99 11
Switzerland	08 48 21 20 00
Taiwan	02 25 18 65 04
Thailand	0 22 68 11 18
Tunisia	71 108 108
Turkey	0 21 65 79 71 00
Ukraine	8 80 05 01 00 00
United Arab Emirates	0 43 31 95 78
United Kingdom	0 87 05 33 44 11
USA	1 88 87 77 02 11
Vietnam	45 63 22 44

Please have your record of purchase ready when calling.

Replacement or repair services are not offered in countries where our product is not sold by authorised dealers.

Authorisation

Your Gigaset is intended for operation in your country, as depicted on the underside of the base station and the packaging. Country-specific conditions have been taken into account. The CE mark certifies conformity of the device with the essential requirements of the R&TTE directive.

Excerpt from the original declaration:
"We, Siemens AG, declare, that the above mentioned product is manufactured according to our Full Quality Assurance System certified by CETECOM ICT Services GmbH with ANNEX V of the R&TTE-Directive 99/5/EC. The presumption of conformity with the essential requirements regarding Council Directive 99/5/EC is ensured"
Senior Approvals Manager

The Declaration of Conformity (DoC) has been signed. In case of need, a copy of the original DoC can be made available via the company hotline.

CE 0682

Specifications

Recommended batteries

(Valid at the time of going to press)
Nickel-metal-hydride (NiMH):

- Sanyo Twicell 650
- Sanyo Twicell 700
- Panasonic 700mAh "for DECT"
- GP 700mAh
- Yuasa Technology AAA Phone 700
- Varta Phone Power AAA 700mAh
- GP 850 mAh
- Sanyo NiMH 800
- Yuasa Technologies AAA 800

The handset is supplied with recommended batteries.

Handset operating times/ charging times

Capacity	800 mAh
Standby time	approx. 150 hours (6 days)
Calling time	approx. 10 hours
Charging time	approx. 10 hours

The operating and charging times apply only when using the recommended batteries.

General specifications

Dimensions, handset	141 x 51 x 28 mm (L × W × H)
Weight of handset with battery	120 g

PC Interface

You can connect the handset to your computer using a data cable (page 31). Your computer can communicate with your handset using a program (free download at www.siemens.com/gigasets44). You can access your handset's directory and load sounds from the computer on to the handset.

During the transfer of data between handset and PC you will see **Data Transfer** on the display. During this time it is not possible to use the keypad and incoming calls will be ignored.

Writing and editing text

The following rules apply when writing a text:

- Control the cursor with ⊛ ⊛ ⊛ ⊛.
- Characters are added to the left of the cursor.
- Press the star key ⊛ **briefly** to switch from "Abc" mode to "123" and from "123" to "abc" and from "abc" to "Abc" (upper case: 1st letter upper case, all others lower case). Press the star key ⊛ **before** entering the letter.
- Press and **hold** the star key ⊛: Shows the selection line of the characters assigned to the star key.
- The first letter of the name of directory entries is automatically capitalised, followed by lower case letters.

Writing names (without predictive text)

When you press a key and **hold** it, the characters of that key appear in the **bottom display line** and are highlighted one after the other. When you release the key the highlighted character is inserted into the input field.

You can see in the display whether upper case, lower case or digits is selected.

Writing SMS (with predictive text)

Requirement: Your base station must support SMS.

EATONI predictive text helps you when you are writing text messages.

Each key between [0 +] and [9 wxyz] is assigned several letters and characters (see the character set tables, page 30). These appear in a selection line immediately under the text panel (over the display keys) as soon as you press a key. The letter you are most likely looking for is reverse-highlighted and is at the beginning of the selection line. It is copied into the text panel.

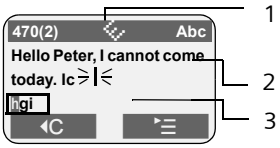

1 EATONI is activated
2 Text of the message
3 Selection line

If this letter is the one you want, confirm it by pressing the next key. If it is not the one you want, **briefly** press the **hash key** [# ⇧] repeatedly until the required letter is reverse-highlighted on the display line and copied into the text panel.

If you press and **hold** the **hash key** [# ⇧], you will see the selection line of characters that are assigned to the hash key.

Deactivating/activating predictive text

Requirement: You are writing an SMS.

Press the display key.

Predictive Text

Select and press **OK** (✓ = on).

Press the end call key **briefly** to return to the text panel. Enter the text.

Order of directory entries

The directory entries are usually sorted in alphabetical order. Spaces and digits take first priority. The sort order is as follows:

1. Space (shown here as ␣)
2. Digits (0–9)
3. Letters (alphabetical)
4. Other characters

To avoid the alphabetical order of the entries, insert a space or a digit in front of the name. These entries will now move to the beginning of the directory. Names which you have preceded with an asterisk will move to the end of the directory.

Entering special characters

Standard characters

	[1 ∞]		[0 +]	[* ♙]	[# ⇧]
	*)	**)			
1x	Space	Space	.	Abc--> 123	#
2x	1	↵	,	123 --> abc	@
3x	£	1	?	*	\
4x	$	€	!	/	&
5x	¥	£	0	(	§
6x	¤	$	+	)	
7x		¥	-	<	
8x		¤	:	=	
9x			¿	>	
10x			¡	%	
11x			"		
12x			'		
13x			;		
14x			_		

*) Directory and other lists
**) When writing an SMS

Accessories

Mobile handsfree set with P2T key

With the mobile handsfree set, you can make a call while keeping your hands free.

Data Cable DCA-500

For connecting your phone to the serial RS232 interface of your computer.

Data Cable USB DCA-510

For connecting your phone to the USB interface of your computer.

All accessories and batteries are available from your mobile phone retailer.

Or you can order direct from the Online Shop at: www.siemens.com/shop.

The Online Shop also has the latest product information.

SIEMENS™ Original Accessories

Only use original accessories. This will avoid possible health risks and damage, and also ensure that all the relevant regulations are complied with.

Index

A

Acknowledge tones 23
Activate
  room monitor 16
Activating
  advisory tones 23
  appointment 23
  auto answer. 20
  handset 6
  keypad lock 6
  muting ringtone. 22
Adjusting
  loud speaker volume 21
Advisory tones 23
Alarm clock
  setting. 23
Alert tone 22
Anniversary. 13
  displaying missed. 24
  not accepting. 24
  storing. 13
  storing in directory. 13
Answering a call 10
Appointment
  activating/setting 23
  deactivating. 24
  displaying not kept. 24
  not accepting. 24
  specifying 24
Assigning a digit key 18
Assigning a display key 18
Assigning key 18
Auto answer 10, 20

B

Base station
  changing the name
    of the base station. 6
Bases station
  changing 6
Battery
  charging 5
  display. 1
  inserting 4
  recommended batteries 28
Battery icon 5
Battery tone 23
Best base station 6
Brightness
  display 20

C

Call
  answering. 10
  end 10
  internal. 11
Call-by-Call list 11
  key 1
Call-by-Call numbers. 11
Calls list 15
Cancelling(operation). 7
Care, phone 26
Changing
  destination number. 17
  display language 20
  emergency number. 25
  name of the base 6
  ringtone 21
Character set chart 30
Charge status display 5
Confirmation beep 23
Control key 1, 7
Correcting wrong inputs 8

D

Deactivating
  appointment reminder 24
  handset 6
  keypad lock. 6
  muting ringtone 22
Default settings
  handset 25
Delete key 7
Deleting
  anniversary. 25
  appointment. 25
  characters. 8
  voice pattern. 14
Dialling pause
  entering 1
Dialling, emergency number. 25
Directory 11
  managing entries 12
  opening 7
  order of entries 30
  saving entry 11
  sending entry/list to handset 13
  storing anniversary 13

Display
brightness 20
change display language 20
contrast 20
display keys 1, 7
emergency number 25
in idle status 8
missed anniversary 24
missed appointment 24
night mode 20
screen picture 20
setting 20
wrong language 20
Displaying
memory 12

E

Earpiece mode 11
Earpiece volume 21
EATONI (predictive text) 30
Email directory 14
Emergency number 6, 25
End call key 1, 10
End, call 10
Entering special characters 30
Error beep 23
Escape key 7
Example
menu input 9
multiple line input 9

F

Fast access
assigning key 1 1

G

Group call 11

H

Handset
activating/deactivating 6
advisory tones 23
changing for best reception 6
changing to another base station . . . 6
contact with liquid 26
de-registering 5
display language 20
idle status, returning to 8
list 7
loudspeaker volume 21
muting 11
night mode 20
operating and charging times 28
registering 5
registering on another base station . 6
restoring default settings 25
screen picture 20
settings (individual) 18
using room monitor 16, 18
using several 6
Handset charging times 28
Handset operating time
in room monitor mode 16, 18
Handsfree
key 1
Handsfree talking 10
Hash key 1, 6
Hearing aids 3

I

Icon
alarm clock 23
appointment 24
ringtone 21
Idle status (display) 8
Initiating voice dialling 7
Internal call 11

K

Key 1 (fast access) 1
Keypad lock 6
Keys
Call-by-Call keys 1
cancel key 7
control key 1, 7
delete key 7
display keys 1, 7
end call key 1, 10
escape key 7
fast access 1
handsfree key 1
hash key 1, 6
menu key 7
message key 1
On/Off key 1
recall key 1
star key 1, 21
talk key 1, 10

L

Language, Display 20
Last number redial list 15
Last number redial, manual 15
Liquid 26
List
  Call-by-Call list 11
  calls list 15
  email directory 14
  handsets 7
  last number redial list 15
Lock
  activating/deactivating
    keypad lock 6
Loudspeaker volume 21

M

Mains adapter 3
Making calls
  answering a call 10
  external 10
  internal 11
Manual last number redial 15
Medical appliances 3
Melody, ringtone 21
Memory
  directory, speed dialling list,
    Email directory 12
Menu
  back one menu level 7
  end tone 23
  entry 7
  key 7
  opening 7
Menu input 9
Message key
  message key 1
  opening lists 15
Microphone 1
Multiple line input 9
Muting handset 11

N

Name
  changing the base station 6
Network provider (number list) 11
Night mode 20
Not accepted
  anniversary 24
  appointment 24
Number
  as destination for room monitor 16
  saving in directory 11
Number list (network provider) 11

O

On/Off key 1
Opening
  directory 7
  menu 7
Operating time for handset 28
Operation (preparing to use
    the phone) 4
Order of entries in directory 30

P

Pack contents 4
PC Interface 29
Phoning
  externally 10
  internally 11
Playing
  voice pattern 14
Predictive text 30
Preparing to use
  phone 4

R

Recall key 1
Recording
  voice pattern 14
Registering (handset) 5
Reminder call 13
Ring delay 20
Ringtone
  changing 21
  muting 22
  setting melody 21
  setting volume 21
Ringtones
  setting 7
Room monitor 16, 18
  activating 16, 18
  entering destination number 16
  sensitivity 16, 18

S

Safety precautions 3
Screen picture 20
Searching in directory 12
Selecting entry (menu) 7

Sending
directory entry to handset 13
Sensitivity, room monitor. 18
Setting
alarm clock 23
appointment 23
date 7
display language 20
earpiece volume 21
loud speaker volume 21
melody 21
night mode 20
ringtone melody 21
ringtone volume 21
screen picture 20
time 7
volume, melody. 21
Setting the date 7
Setting the time 7
Settings
handset (individual) 18
Signal beep, see Advisory tones
Sound
ringtone 21
Sound Manager. 22
Specifications 28, 29
Star key. 1, 21

T

Talk key. 1, 10
Text
writing, editing 29
Troubleshooting 26

V

Voice dialling 14
using. 14
Voice pattern
deleting. 14
playing 14
recording. 14
Volume
earpiece 21
handset loudspeaker 21
loudspeaker. 21
ringtone 21
setting. 21

W

Wait melody. 11
Walky-Talky
activating 18
deactivating 18
setting 17
Warning beep, see Advisory tones
Wrong inputs (correcting) 8